

負荷対応表

舞台

LHT下			奥C		奥C		LH上		
DMX	R	G	1	2	3	4	B	W	DMX
OUT15	65	66	133	134	135	136	67	68	OUT16

SCT下

7	8	9
121	122	123
4	5	6
118	119	120
1	2	3
115	116	117

UH

R	G	B	W	DMX	DMX
61	62	63	64	OUT13	OUT14

SC上

7	8	9
130	131	132
4	5	6
127	128	129
1	2	3
124	125	126

3S

DMX	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DMX
OUT11	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	OUT12

天反

1	2	3	4	5	6
141	142	143	144	145	146

2S

DMX	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DMX
OUT9	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	OUT10

1S

DMX	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DMX
OUT7	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	OUT8

舞台袖下手

C型	
20A	
DMX IN	DMX IN
A	B
DMX	DMX
OUT1	OUT2

BL

R	G	B	W	DMX	DMX
137	138	139	140	OUT5	OUT6

舞台袖上手

C型	
20A	
DMX IN	DMX IN
C	D
DMX	DMX
OUT3	OUT4

花C

1	2
113	114

前C

1	2
109	110

前C

3	4
111	112

PS

DMX	1	2	3	4	5	6	7	8	9	10	11	12
OUT17	49	50	51	52	53	54	55	56	57	58	59	60

FRT下

9	10	11	12	DMX
77	78	79	80	OUT19
5	6	7	8	DMX
73	74	75	76	OUT18
1	2	3	4	
69	70	71	72	

FR上

DMX	9	10	11	12
OUT21	89	90	91	92
DMX	5	6	7	8
OUT20	85	86	87	88
1	2	3	4	
81	82	83	84	

CL

DMX	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DMX
OUT22	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	OUT23

客席DL

1列目	2列目	3.4列目	親子室
147	148	149	150

直客席

C型	DMX IN	DMX IN
20A	E	F

凡例

- 調光回路 (Blue box)
- 直回路 (Yellow box)
- DMX信号 (Red box)

上段: 負荷回路NO
下段: DIM-NO

注※DMXアドレスは基本設定

客席